

## **EASYREG SOFTWARE**

### **TECHNICAL NOTE #2**

#### **Voltage display in Manual mode.**

**Date:** 29/03/2016

**Software:** Easyreg

**Version:** all releases below 2.60

**Hardware:** D510C

**Firmware:** all versions

When a voltage transformer (PT) is used, the alternator voltage shown in Easyreg in the "lexc" tab is that of the PT secondary side. The user must use the transformer ratio to calculate the real alternator output voltage or use Easyreg « Monitor » tab for direct reading.

Direct reading on both tabs is only available on Easyreg 2.60 and above.